




INSTALLATION INSTRUCTIONS - SUPPLEMENT

**TURBOCHARGER SYSTEMS:
Scion tC – Automatic Transmission**

P/N 15167 (No Catalytic Converter)

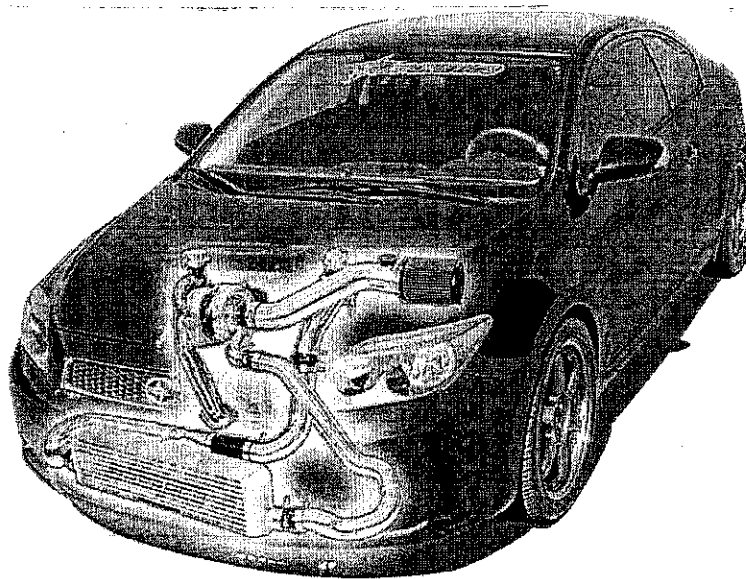



- 1.) When connecting intercooler pipe assembly (P/N 21241) from the throttle body pipe to the pipe (P/N 21240) with the 6.50" long silicone hose starting on step 8, page 27 in the main installation instruction manual, it is necessary that you modify the automatic transmission shifter cable bracket by grinding a portion of the corner away to clear the new supplied intercooler pipe assembly.

FIGURE 68

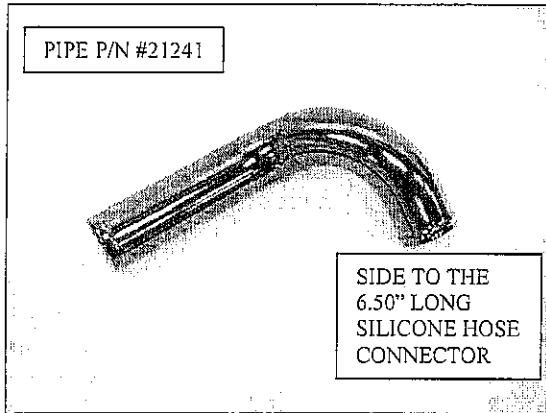


FIGURE 69

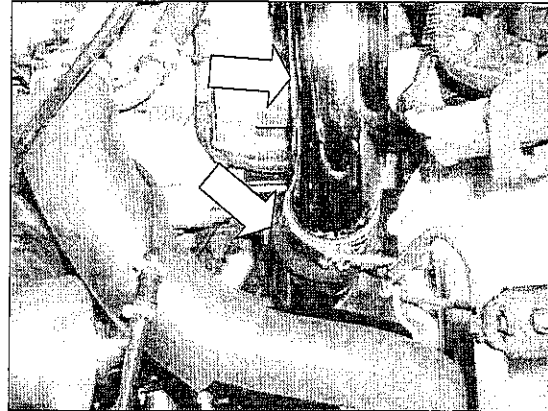


FIGURE 70

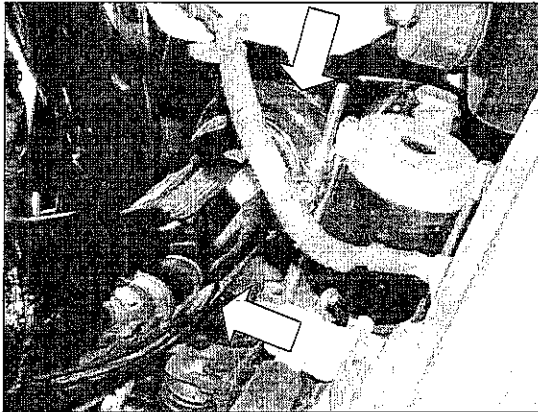


FIGURE 71

